
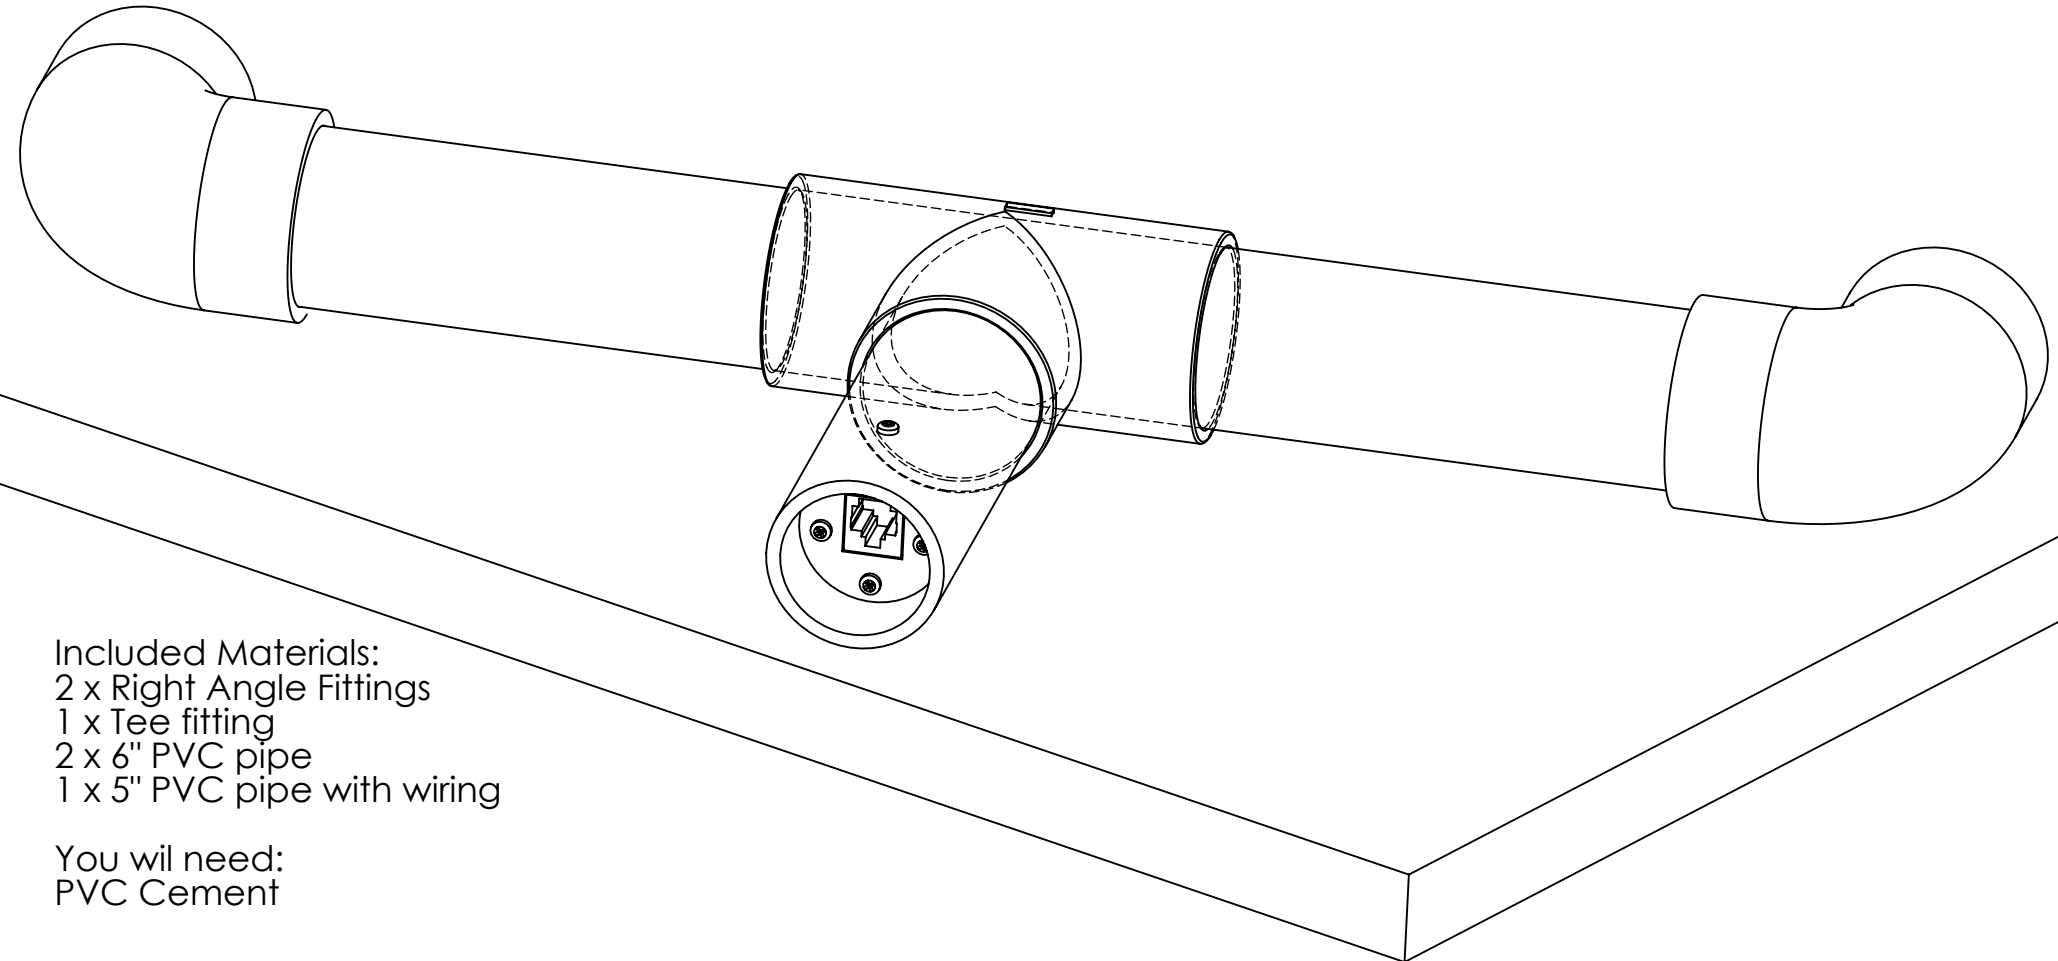


Sensor Tee Assembly Instructions

APRS World, LLC
Revised: 2008-02-19

- 1) Glue right angle fittings to 6" pipe
- 2) Glue pipe with wiring to tee fitting
- 3) Using a flat surface to assure that the components are oriented correctly, glue remaining connections

Do not use PVC cement to secure the anemometer and wind vane!
The sensors are press fit into the right angle fittings. If you are concerned about the sensor becoming dislodged please use tape or screws to attach.

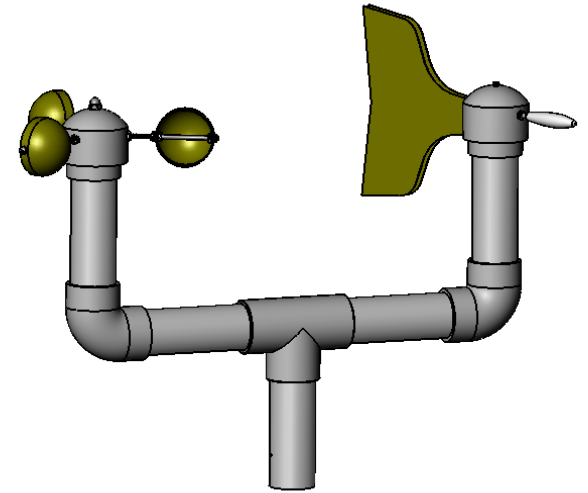

Included Materials:
2 x Right Angle Fittings
1 x Tee fitting
2 x 6" PVC pipe
1 x 5" PVC pipe with wiring

You will need:
PVC Cement